

Victory Sprayer

Victory handheld units will be provided in large teaching classrooms and labs. Smaller class sizes will be provided with 32 oz. spray bottles filled with approved disinfectant (QT3)



Use Directions - Handheld Unit

1 Charge Battery

This side is fully illuminated when charged.

(2 hour charge time)

Note: If wet, the battery will not work or charge. Keep liquids from touching battery and charger contacts. Wipe battery and charger contacts with dry cloth immediately if they come into contact with liquids.



4 Connect Tank



Align tank grooves into slide rail, lower machine onto tank. (Listen for a "click")

Rotate collar to lock icon position.

2 Remove Tank to Re-Fill



Rotate collar to unlock icon position.



Pull locking ring to remove.



Lift unit off the tank.

3 Re-Fill Tank


QT3:

A ready to use QT3 or other approved disinfectant solution will be provided by custodial services. Fill the tank with disinfectant solution, and proceed to Step 4.



Important: All disinfectants provided will be on EPA's List N: Disinfectants for Use Against SARS-CoV-2 (COVID-19). To be effective, the surface must remain wet with the disinfectant for 3 minutes. The nozzle on the machine has been set accordingly. After 3 minutes, the moisture can safely be wiped away with a paper towel. Paper towels will be provided in all teaching classrooms and labs.

5 Adjust Nozzle

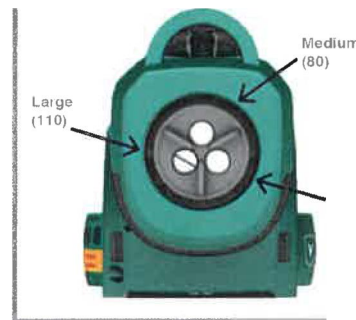

(Nozzle should have been placed and ready to use in the 80 micron - medium setting)

Rotate the nozzle to select the medium (80 micron) setting.

Hillyard recommends 80 micron nozzles for use with their disinfectants.

Small
40

6 Spray



Turn on the unit and squeeze the trigger. Optimum sprayer distance is 2 feet (24 inches). Turn the switch to off upon completion.

7 Clean Up

Remove tank,

Refer to product label for proper disposal of unused solution.

It is important to rinse the tank and spray clean water through the sprayer at the end of each day to prevent buildup. (Ideally, this would be done by the last instructor, but custodial services will do at the beginning of each day)

For preventative maintenance: Rinse nozzle with hot water after every couple of uses. (Instructions for nozzle removal and wrench included in case.)

