MMTSB/CTBP Workshop

August 4-9, 2009

CHARMM Analysis Tools

Jianhan Chen Kansas State University


<u>Credits</u>: This lecture and associated tutorials were built upon materials originally created by **Lennart Nilsson** (Karolinska Institutet) for the MMTSB/CTBP Workshop of 2006.


What is "analysis"?


- The process of extracting certain properties from simulation
 - Often for the purpose of assessment, validation or prediction
 - The important focus of connecting to experiment
- Some basic analysis issues
 - What do I want to know from my simulation? How can this help with my scientific problem?
 -- HAVE TO BE ADDRESSED EARLY !!!
 - A single number (energy, Rg, ...) convergence?
 - Properties of a single structure representative?
 - Properties of an ensemble how many?
 - Time-dependence time scale?
- This lecture (and associated tutorials) only focus on the technical aspects.

Overview and Purposes

- Main CHARMM analysis modules
- Examples of "typical" analysis
 - Structural properties, solvent, clustering ...
 - Provide a better understanding of the philosophy and basic flow of CHARMM analysis
 - Improve ability to sort through/understand the CHARMM documents to locate the tools for the specific analysis that is needed
- The number of analysis tools in CHARMM still dazzle me
 - Find help: tutorials, test cases, CHARMM forum, "experts" ...
 - Treasure hunting?

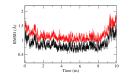


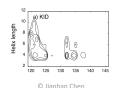

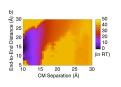

Basic Flow of Operations in CHARMM

- Remember that CHARMM only provides functional blocks.
- The user needs to write programs, or, CHARMM "input scripts", to specify the composition and flow of operations

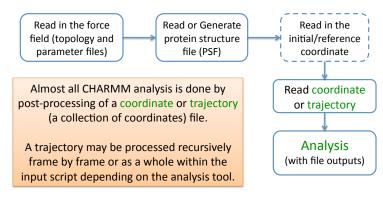

© Jianhan Chen

© Jianhan Chen

4

* Compute CA rmsd between two coordinates title (vs comments) !Read topology and parameter (aka force field) read rtf card name toppar/top all22 prot.inp force field read para card name toppar/par all22 prot.inp !Read PSF and initial/reference coordinates **PSF** read psf card name 3gb1 solv.psf reference coor. read coor pdb resid name 3gb1 solv.pdb !Save a copy in the COMParison coordinate set coor copy comp !Read another set of coordinates coor. to analyze read coor pdb resid name nptprod.pdb !Compute the heavy atom and CA RMSD values coor orient rms select type CA end RMSD analysis set carms = ?rms write title name rmsd.dat Output * CA rms = @carms Extract from "rmsd-singlepdb.inp" stop (c) Jianhan Cher

read rtf card name toppar/top all22 prot.inp force field read para card name toppar/par all22 prot.inp **PSF** read psf card name 3gb1 solv.psf read coor pdb resid name 3gb1 solv.pdb reference coor. coor copy comp !Open file unit of trajectory input traj to analyze open read unit 13 file name nptprod.dcd !Open the output file and write header Output file open write unit 11 card name rmsd-rgyr-correl.dat !Invoke CORREL mode correl maxtime 1000 !request RMS with orient and radius of gyration Request RMSD enter v1 rms orient and Rg analysis enter v2 gyra !specify the trajectory to process Analyze! trai firstu 13 nunit 1 !write the time series to a file Write output edit v1 veccod 2 write v1 dumb time unit 11 end ! Exit CORREL Extract from "rmsd-rgyr-traj-correl.inp" stop (c) Jianhan Ch

Internal and User-Defined Variables

- Internal variables: listed in subst.doc
 - Values assigned by related charmm operations (e.g., analysis).
 - Accessed by ?VARIABLE NAME
 - Not directly modifiable in input scripts
- User defined variables (see miscom.doc)
 - Created and manipulated directly within an input script
 - To create or modify: set VARIABLE = VALUE calc VARIABLE = ...
 - Accessed by @VARIABLE_NAME
- Special user accessible variables @1 @9
 - Can be used in system command calls
- SCALar: access to internal data (charges, mass, ...) and allow simple array arithmetic within the input scripts (scalar.doc)

© Jianhan Chen

6

Main CHARMM Analysis Modules

- CORMAN: single coordinate sets, averages of trajectories (corman.doc)
 - Basic format: COOR XXXX
- QUICK: quick analysis of single coordinate sets (miscom.doc)
- Energies: ENERgy and INTEaction energy (energy.doc)
- CORREL: time-series and correlation functions from trajectories (analyze trajectories) (correl.doc)
 - A set of sub-commands within the CORREL block.
- Solvent analysis: COOR ANAL, RDFSOL (rdfsol.doc)
- NMR analysis: NMR (nmr.doc)
- Quasi-harmonic modes: VIBRAN (vibran.doc)

Trajectories

© Jianhan Chen

8

Part I: Single Structure Analysis

- Structural geometry data (COOR or QUICk)
 - Distance, angle, dihedral, radius of gyration, least-squares-plane through set of atoms, sugar conformations (puckering), helix orientation, geometry center or center of mass, ...
- Energy data (ENERgy or GETE or INTEraction)
 - Energy: all terms accessible by internal variables (e.g., ?ener)
 - Forces, contributions from each atom (or subsets of atoms), interaction energy between specified sets of atoms
- Composite data
 - Secondary structure analysis: COOR SECS (DSSP-based)
 - Hydrogen bonds (COOR HBONd), RMSD, solvent accessible surface area (COOR SURF), volume, cavities, contacts, inertia tensor,
- Single structure analysis can be put in a loop to analyze trajectories

© Jianhan Chen

Energy examples

compute energy terms and forces, print energy and average force: energy

interaction energy between two sets of atoms; energy terms that only dependent on atoms in one set are not computed:

 $\label{lem:potential} \begin{tabular}{ll} up date ! set up necessary nonbond lists for energy calculation \\ interaction select segid prot end $\tt sele segid lig end \\ \end{tabular}$

after an energy evaluation the force (kcal/mol/Å) on each atom is available:

coor force comp ! copy force into comparision set

scalar xcomp show sele type ca end ! print Fx on all CA atoms contributions from each atom, excluding bond energy terms (analys.doc):

analysis on! turn on the parition analysis

skipe bond energy

scalar econt show ! print atomic contributions

echo ?ener ?elec ?grms !energy.doc

(c) Jianhan Chen

Geometric Examples

quick 34 41 prints distance between atoms 34 and 41 quick 34 41 52 prints angle between atoms 34, 41 and 52 radius of gyration:

coor rgyr mass select ires 3:28 end minimum distance between two sets of atoms:

coor mindist sele segid prot end sele segid dna end coordinate statistics (x,y,z min, max and average):

coor stat

dipole moment: coor dipole

RMSD between main and comp coordinates, after optimal superposition:

coor orient rms


Solvent accessible surface area of each selected atom, disregarding the rest:

coor surface select segid prot .or. segid dna end

Most of these commands also set CHARMM variables (?xxx, subst.doc)

© Jianhan Chen

Hydrogen Bonding Analysis

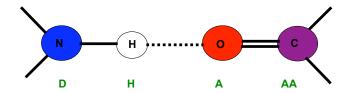

- Several parameters can be used to characterize the h-bond:
 - r(D-A), r(H-A), \wedge (D-H-A), \wedge (H-A-AA)
- CHARMM has lists (in the PSF) of the Donors, Acceptors and Acceptor Antecendents, from DONOR and ACCEPTOR statements in the RTF (also available as commands)
 - These specifications are used by COOR HBONd analysis facility

© Jianhan Chen 12

Hydrogen Bond Criteria

Table II.	Comparison	between
-----------	------------	---------

24310 211 O 0 111 par 10 0 11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
criterion	i-i+4 (%)	
O-H < 2.4 Å	84.1	
O-H < 2.6 Å	78.5	
$O-N-H < 35^{\circ}$		
O-H < 2.5 Å	85.3	
$N-H-O > 120^{\circ}$		
O-H < 2.4 Å	68.9	
$N-H-O > 135^{\circ}$		
O-N < 3.4 Å	91.8	
$N-H-O > 90^{\circ}$		
O-N < 3.4 Å	91.7	


Ref. De Loof, H., Nilsson, L., and Rigler, R. (1992) JACS *114*, 4028-35.

- Fraction of backbone N-H...O hydrogen bonds found in a simulation using different criteria (DeLoof et al JACS).
- The simple criterion r(H-A)<2.4Å is reasonable. A correlation between the r(H-A) and Λ(D-H-A) criteria was also observed, due to steric clash between A and D, explaining why the angle criterion adds little extra in this case.

© Jianhan Chen

H-Bond Analysis for a Single Structure

- The COOR HBONd command (corman.doc) finds and lists all hydrogen bonds between two atom-selections based on r(H-A), and optionally Λ(D-H-A).
- The command uses acceptor/donor lists in the PSF to identify possible hydrogen bonding atoms. If DONO/ACCE statements are missing for some residue(s) in your RTF you have to add these and regenerate the PSF before using COOR HBONd (this may be the case for TIP3 residues).

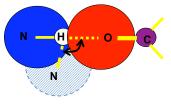

© Jianhan Chen 14

COOR HBOND Examples

coor hbond sele type hn end sele type 0 end
coor hbond sele segi prot end sele segi wat end verb

For each donor/acceptor in the first selection the number of hydrogen bonds to any acceptor/donor in the second selection is printed out.

Keyword VERBose gives a more detailed listing that includes the identity of the atoms involved in the second selection, and the actual geometry.

CHARMM substitution variables ?NHBOND and ?AVNOHB are set if VERBose is not used.

coor hbond sele segi prot end sele segi dna end bridge tip3

This form finds and lists all instances where a residue with the name tip3 is hydrogen bonded to some atom in both selections, in this case water bridges between a protein and a DNA molecule.

Some PBC can be handled. The tool COOR CONTact does not use acceptor/donor lists in the PSF (purely distance based).

Protein Secondary Structure Analysis

- Proteins usually have a high content of secondary structure elements, α -helices and β -sheets
- CHARMM uses the Kabsch&Sander method (DSSP; Kabsch, W., and Sander, C. (1983). Biopolymers 22, 2577-2637), which is based on patterns of backbone hydrogen bonds. The default hydrogen bond criterion here is r(H-A)<2.6Å.
- Example:

COOR SECS SELE SEGID PROT END SELE SEGID PROT END

Finds secondary structures in the first selection, within the context of the second selection, e.g., a β -strand in the first selection will be recognized as such if it forms appropriate hydrogen bonds to residues in the second selection. Sets CHARMM variables (?nalpha ?nbeta), and returns flags in WMAIN array (0: coil, 1: alpha, 2: beta).

© Jianhan Chen 15 © Jianhan Chen 16

Part II: Analysis of Trajectories

- To obtain averages/distributions (CORMAN etc), time series (CORREL etc)
- Several modules/commands can directly access trajectories (coordinates or velocities), eg CORREL and NMR
- Trajectory specification: used in multiple major commands

```
first n nunit k begin m1 skip m2 stop m3
```

Access *k* binary files on units *n* to *n+k-1*. Extract every *m2*:th coordinate set between *m1* and *m3*. *m1*, *m2*, *m3* are specified as integration step numbers from the start of the whole simulation.

Example: Compute average structure and RMS fluctuations (in WMAIN):

```
open read file unit 51 name myfile_4.trj
open read file unit 52 name myfile_5.trj
coor dyna first 51 nunit 2 begin 2500 skip 50 stop 5000
```


© Jianhan Chen

Solvent Structural Analysis

• Radial distribution function g_{AI}

$$g_{AB}(r) = \frac{N_{AB}(r, \Delta r)}{\rho_B V_S(r, \Delta r)}$$

where $N_{AB}(r,\Delta r)$ is the average number of B sites found in a shell, Δr thick, at distance r from the A sites, V_S the volume of this shell, and ρ_B the average number density of B sites in the system. CHARMM can compute ρ_B , or it can be given by user.

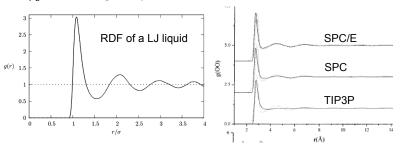

© Jianhan Chen

H-Bond Analysis of Trajectories

```
coor hbond first 51 nunit 3 skip 2500 -
sele segid prot end sele segid wat verbose
```

Computes all hydrogen bonds between the two selections for each specified coordinate frame.

For each acceptor/donor in first selection: print average number of hydrogen bonds and the average lifetime over the trajectory. Note that SKIP can influence the lifetime estimate. 5ps resolution means that intermittent breaks < 5ps are less likely to count as a real disruption.

The verbose keyword has two effects:

i) a more detailed summary with atom identifications from the second set is printed.

ii) each time an instance of a hydrogen bond is broken information about this event, including the duration of this particular hydrogen bond, is printed.

For hydrogen bonds to solvent, use a recentered trajectory, or the COOR HBOND support for some PBC types.

Distance (unit irhi) and time (unit ithi) distributions of hydrogen bonds:

```
coor hbond first 51 nunit 3 skip 2500 — sele segid prot end sele segid wat irhi 21 ithi 22
```

RDF Analysis in CHARMM

CHARMM tools: RDFSOL and COOR ANALysis

Example 1: g(r) for waters; the program defaults are used to calculate the density using selected atoms within 10 A (RDSP keyword) of the reference point (0,0,0) (REF keyword)

```
open unit 21 read unform name pept.dcd
open unit 31 write form name pept.goo
open unit 32 write form name pept.goh
open unit 33 write form name pept.ghh
!WATEr gets all three g(r) functions computed
coor anal water select type OH2 end —
igdist 31 ioh 32 ihh 33 —
mgn 100 dr 0.1 rsph 999.9 —
firstu 21 nunit 1 skip 500 — !traj specification
xbox 30.0 ybox 30.0 zbox 30.0 !PBC information
```

Three columns are written to each *.g** file: r (Å), g(r), total number of configurations within r. Excluded volume and PBC can be corrected for.

© Jianhan Chen

RDF Analysis in CHARMM

CHARMM tools: RDFSOL and COOR ANALysis

Example 2: g(r) for water oxygens wrt backbone amide hydrogens

```
open unit 21 read unform name pept500.cor
open unit 31 write form name pept500.gonh
coor anal select type oh2 end -
site select type HN end multi -
firstu 21 nunit 1 skip 500 -
isdist 31 mgn 100 dr 0.1 rsph 999.9
```

When several solute atoms are specified as the site, their average position will be used as the reference position if MULTi is not present

Several types of analysis (with some exceptions) may be combined in a single "coor analysis" command (see corman.doc).

© Jianhan Chen

COOR ANAL: Self Diffusion

 The diiffusion coefficient D can be computed using the Einstein relation:

$$\lim_{t \to \infty} MSD(t) = 6Dt$$

- MSD is the mean square displacement $\langle (\mathbf{r}(t)-\mathbf{r}(0))^2 \rangle$
- CHARMM calculation of MSD (invoked by imsd)

```
open unit 21 read unform name pept500.cor
open unit 31 write form name pept500.msd
coor anal select type oh2 end -
firstu 21 nunit 1 skip 10 -
imsd 31 rspin 0.0 rspout 999.9 ncors 100 -
xbox @6 ybox @7 zbox @8
```

CHARMM will print an estimate of D, but you should plot MSD(t) and compute D from the slope of the linear part.

© Jianhan Chen 23

COOR ANAL: Hydration Analysis

Calculate number of solvent molecules within a specified distance of a site (invoked by specification of rhyd and/orihydn):

?NHYDRR - number of solvent molecules (residues)

?NHYDAR - number of solvent atoms

?NHYDAA - number of solvent atoms within RHYD of solute atoms (3 water molecules within RHYD of a 7-atom solute → NHYDAA=63)

Sets the CHARMM variables to the averages over the trajectory, and prints the values to the logfile; optionally also to a file every timestep (if IHYDN>0).


```
coor anal sele resn tip3 .and. type oh2 end -
   site sele resn asp .and. type od1 show end multi -
   firstu 21 nunit 1 skip 500 rhyd 3.0
```

Note: You need keyword MULTi if the solute (the SITE) has more than one atom.

Use COOR ANAL IHIST to get a 3D distribution (histogram)

© Jianhan Chen 22

A Sample MSD Function

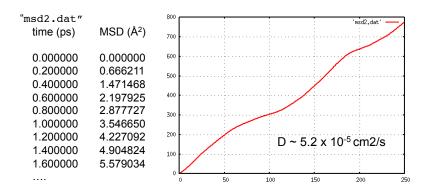

Calculated from a 1 ns simulation of a TIP3P water box.

(c) Jianhan Chen

We are almost done ...



read rtf card name toppar/top_all22_prot.inp
read para card name toppar/par_all22_prot.inp
read psf card name 3gb1_solv.psf
read coor pdb resid name 3gb1_solv.pdb
reference coor.

!Open file unit of trajectory input open read unit 13 file name nptprod.dcd traj to analyze

!Open the output file and write header open write unit 11 card name rmsd-rgyr-correl.dat Output file

open write unit 11 card name rmsd-rgyr-correl.dat

!Invoke CORREL mode

correl maxtime 1000
!request RMS with orient and radius of gyration
enter v1 rms orient
enter v2 gyra

!specify the trajectory to process traj firstu 13 nunit 1

!write the time series to a file
edit v1 veccod 2
write v1 dumb time unit 11
end ! Exit CORREL

stop

Request RMSD and Rg analysis

Analyze!

Write output

Extract from "rmsd-rgyr-traj-correl.inp"
(c) Jianhan Chen 27

CORREL

The CORREL module (correl.doc) allows **extraction** of various time-series from a trajectory, **manipulation** of these time-series and calculation of **correlation** functions. Time-series in CHARMM are structured data sets with a number of properties.

```
correl [maxtime n] [maxseries m] [maxatoms k]
  enter name1 type [optional type-dependent info]
  enter name2 ...
  :
  traj nfirst int nunit int begin int skip int end int
  mantime name action
  edit name ...
  read name! Can be simple data file, eg results from
        ! interaction energy calculations

corfun name1 name2
  write name unit int
end
```

@ Jianhan Chen

read rtf card name toppar/top all22 prot.inp force field read para card name toppar/par all22 prot.inp **PSF** read psf card name 3gb1 solv.psf read coor pdb resid name 3gb1 solv.pdb reference coor. coor copy comp !Open file unit of trajectory input traj to analyze open read unit 13 file name nptprod.dcd !Open the output file and write header open write unit 11 card name rmsd-rgyr-corman.dat Output file !Process a trajectory using a loop Traj specification traj firstu 13 nunit 1 set inx = 1Start of loop label nextframe traj read RMSD and Rq coor orient rms select .not. resn tip3 end analysis coor rgyr select .not. resn tip3 end write title unit 11 *@inx ?rms ?rgyr Write output incr inx by 1 if inx le 100 goto nextframe End of loop Extract from "rmsd-rgyr-traj-corman.inp" stop (c) Jianhan Cher

Correlation Function Analysis

• Time series data, f(t), and many relaxation phenomena are often easy to characterize by correlation functions

$$C(\tau) = \langle f(t) \cdot f(t+\tau) \rangle$$

- Provide direct links to experimental observables (time scale, order parameter, spectral density, etc) (MSD is a correlation function!)
- Example: time-dependent fluorescence anisotropy



Time-resolved fluoresence

Short pulse of polarized light excites (mainly) those chromophores with μ_{abs} parallel to polarization of pulse



Emission occurs briefly (psns) after excitation, when chromophore may have changed orientation


29


Time-dependent fluorescence anisotropy, r(t)

• r(t) is related to rotational diffusion of the chromophore.

$$r(t) \propto \frac{I_{II}(t) - I_{\perp}(t)}{I_{II}(t) + 2I_{\perp}(t)} = \left\langle P_2(\widehat{\mu}_{abs}(0) \bullet \widehat{\mu}_{em}(t)) \right\rangle$$

- $P_2(x) = (3x^2 1)/2$ is 2nd order Legendre polynomial.
- For a rigid spherical molecule, $r(t) \sim \exp(-t/\tau)$.
- · Effective correlation time

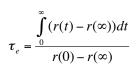

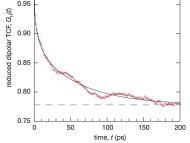

- τ_e = τ for single exponentials

© Jianhan Chen

NMR Relaxation Analysis

• Compute relaxation constants (R₁, R₂, NOE) at a specified field

correlation function of the bond vector (e.g., N-H). The theory

• Besides the relaxation constants, also print out general order

parameters, effective correlation times. One can request

strength, given an estimate of molecular tumbling time.

All relaxation constants are related to the orientational

Computing r(t) in CHARMM CORREL

© Jianhan Chen

correl maxtime 2000 maxseries 10 maxatom 20 ENTER LA VECTOR XYZ prt 8 NE1 prt 8 CZ3 - prt 8 NE1 prt 8 CE3


traj firstu 62 nunit 2 mantime la normal corfun la la p2 write corr dumb time unit 31 END

NE1-CZ3 and NE1-CE3. This approximates

the L_a transition dipole in Trp

Computes rank 2 correlation function for a unit vector along the average of vectors

! Normalize vector ! Compute p2

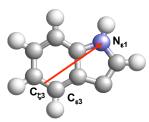

output of the bond vector time series r(t) and/or the correlation functions c(t).

A few references:

is guite involved.

- Bruschweiler et al., JACS 114, 2289 (1992)

Implemented with NMR module (nmr.doc)

- Chen et al., J. Biomol. NMR, 29, 243 (2004)

Example of NMR Relaxation Analysis

NMR
RTIMES select type N end select type HN end

DYNA firstu 51 nunit 1 rtumbl 9000.0 hfield 11.74 cut 1.5 tmax 5000 ilist 21 iwrite 11 C(t) R(t) ! Output options
END

This example was to process a 10-ns trajectory of DHFR in TIP3P water.

RTIMES requests relaxation analysis for all vector between atom types N and HN within ${\tt cut}\ 1.5$ to be computed.

Assuming that the molecular tumbling time is 9 ns (rtumbl 9000.0) and the magnetic field strength is 11.74 T (hfield 11.74).

 ${\tt tmax}~5000$ is the length of correlation functions. It is an important parameter and can have a large influence on the results. One needs to examine the correlation function C(t) to check if the choice is appropriate. ${\tt tmax}$ typically should not be greater than half of the total simulation length.

(c) Jianhan Chen

Example of Clustering with CORREL

correl maxtimesteps 5000 maxseries 150 maxatoms 750

enter s30 dihe pept 30 n pept 30 ca pept 30 c pept 31 n
enter s41 dihe pept 41 n pept 41 ca pept 41 c pept 42 n
enter f42 dihe pept 41 c pept 42 n pept 42 ca pept 42 c

traj firstu 62 nunit 3
edit s30 veccod 3 ! Combine time series for clustering
cluster s30 angle radius 30.0

end

The CLUSter command clusters these data into groups with similar time series values, with each cluster being defined by a "cluster center". The cluster centers are output to UNICluster, and a list of time points and assigned clusters is given in the cluster membership file (UNIMember).

Clustering Structures

- · Multiple methods are available in CHARMM for clustering
- CORREL contains a cluster algorithm (see correl.doc)
 - Mainly intended for clustering based on RMSDs of a set of backbone dihedrals, but could in principle for any time series (caution needs to be taken in mixing various properties with very different variants).
- RMSDyn can be used for clustering based pair-wise RMSDs betweens structures in a trajectory (see dynamc.doc)
 - Generate a 2D p-q projection for visualization
- The MMTSB Tool Set also contains a tool (enscluster.pl) for structure clustering.
 - Need to convert trajectory to MMTSB structure ensemble
 - Multiple clustering algorithms available
 - more convenient post-processing: many "routine" analysis can be quite conveniently done with an array of tools!

© Jianhan Chen 3



Credit: Lennart Nilsson

Centre for Structural Biochemistry


Department of Biosciences and Nutrition

Karolinska Institutet

http://www.csb.ki.se/md/md.html

(c) Jianhan Chen 3

Inconclusive Experiments

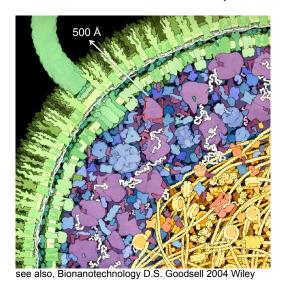

Extreme simplification

Limited force field accuracy

Large gaps in timescales

37

